



Zekeringkast		
Locatie	Amp.	Zekeringen
F1	15A	Reserve
F2	25A	Claxon, verwarming
F3	20A	Brandstofpomp, motormanagem.
F4	25A	ABS
F5	15A	Aansteker, interieurverlichting
F6	15A	Alarm signaal
F7	15A	Stoplichten, mistlicht
F8	20A	Startmotor
F9	10A	Microprocessor motorsysteem 15A
F10	15A	Instrumenten, alarm signaal
F11	20A	Ruitenwissers, achteruitrijlicht
F12	10A	ABS
F13	15A	Verwarmde voorstoelen
F14	10A	Koplampen dimlicht
F15	10A	Koplampen grootlicht
F16	10A	Parkeerlicht, instrumentenverlicht.
F17	80A	Hoofdzekering
F18	40A	ABS
Relais		
R1	Startmotor	
R2	Knipperlichten	
R3	Ruitenwissers	
R5	Grootlicht	
R6	Dimlicht	
R7	Contactrelais	
R8	Hoofdrelais	
R9	Brandstofpomp	

