



# MMC 3104 Firmware

1) Unzip the firmware archive to the root of the microSD card:

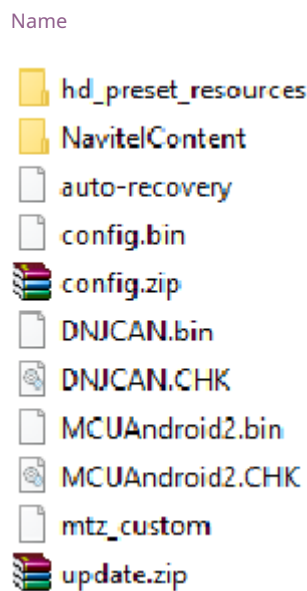

2) Turn on the MMC, insert the MICROSD card into the connector.

3) Flash the CAN adapter (Settings – About Tablet – CAN version). Click on the area marked in red a rectangle

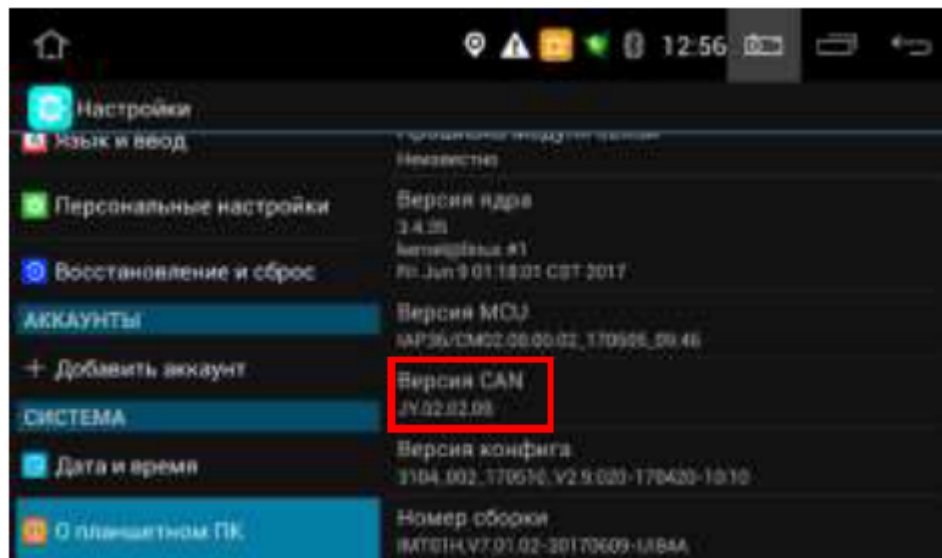



4) After the CAN adapter firmware is finished, press Reset WITHOUT REMOVING the microSD CARD. The MMC will restart and the firmware update will start. During the firmware process, the MMC can be several restart.

once

5) Wait for the message about the end of the firmware, pull out the MICROSD card. The MMC will start loading.



6) After downloading the MMC, insert the MICROSD card, install Navitel maps (Settings-Factory Settings-Password 8317 – Installing applications). Wait until the file copying process is complete.

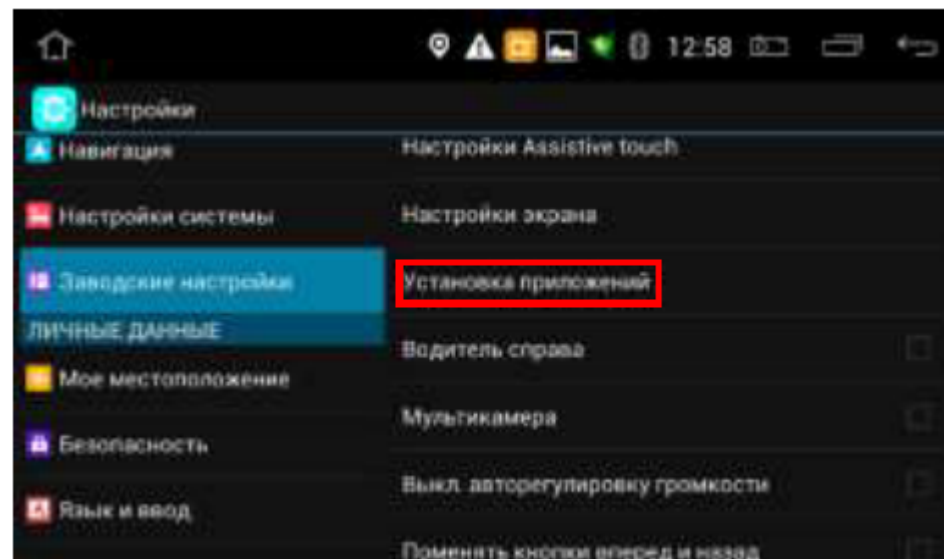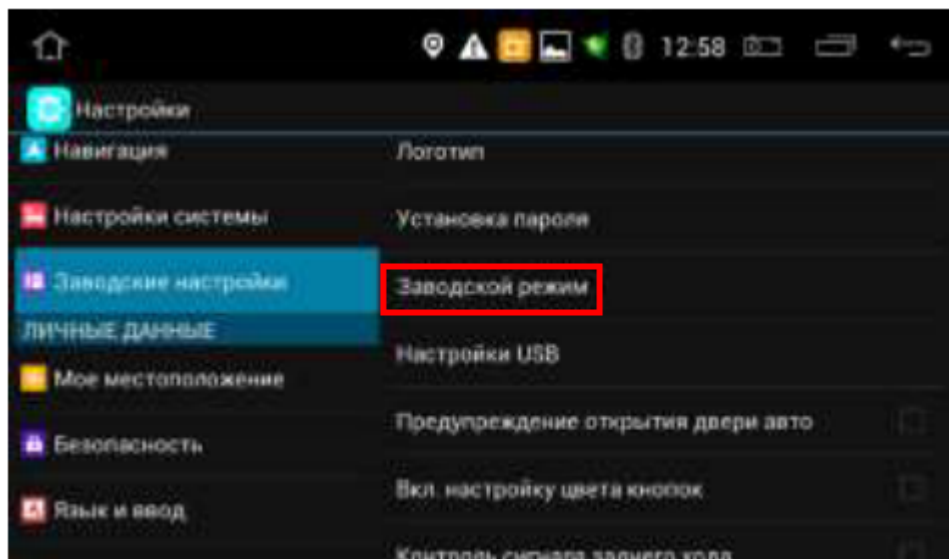

7) Remove the microSD card.

8) Launch Navitel Navigator and activate the license key.

9) The firmware is complete.