

Installation of steering damper RIF (SD 09) with brackets on UAZ Patriot/ UAZ Hunter

When installed on the UAZ Patriot, the number bracket is used.

RIF000-99007


When installed on the UAZ Hunter, the number bracket is used.

RIF000-99010

The difference between the brackets is only in the angle of inclination of the finger fixed on the steering rod.

Installation Description

1. Remove the standard engine compartment protection. To install the clamp in it, you need to make a small groove, or bend it a little:

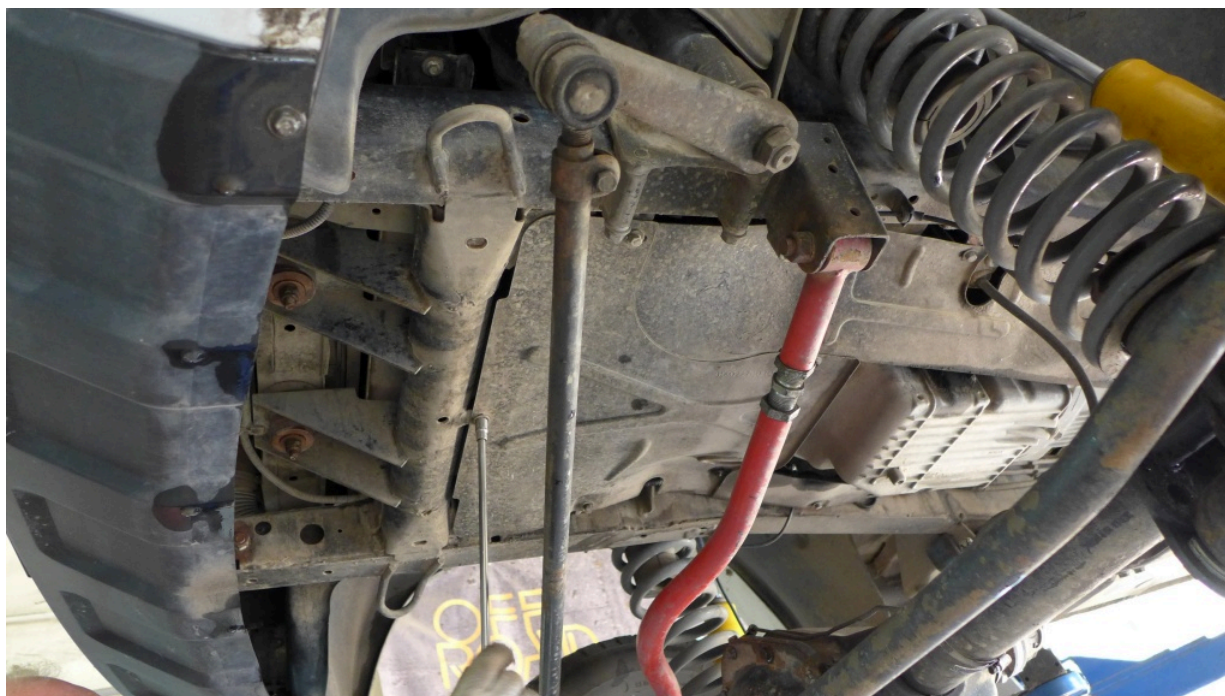


In some cases, it is possible to install the clamp without modifying the protection. Install the bracket corner on the right side of the car frame using a clamp. The ear should be placed outside the car frame and turned downwards. Tighten the clamp nuts after final installation.




2. Install the finger bracket on the long steering rod. The axis on the bracket is tilted in relation to the axis of the steering rod. The finger should be positioned vertically to the top and have an inclination to the left wheel of the car. The distance between the axes of the brackets is 610-620 mm. Tighten the bracket bolts after final installation.



3. Before installing the steering damper, it is necessary to pump it, squeeze it several times , and then unclench it. For installation, it is necessary to set the distance between the axes of the damper 610-620 mm, the wheels of the car should be located in a straight line.

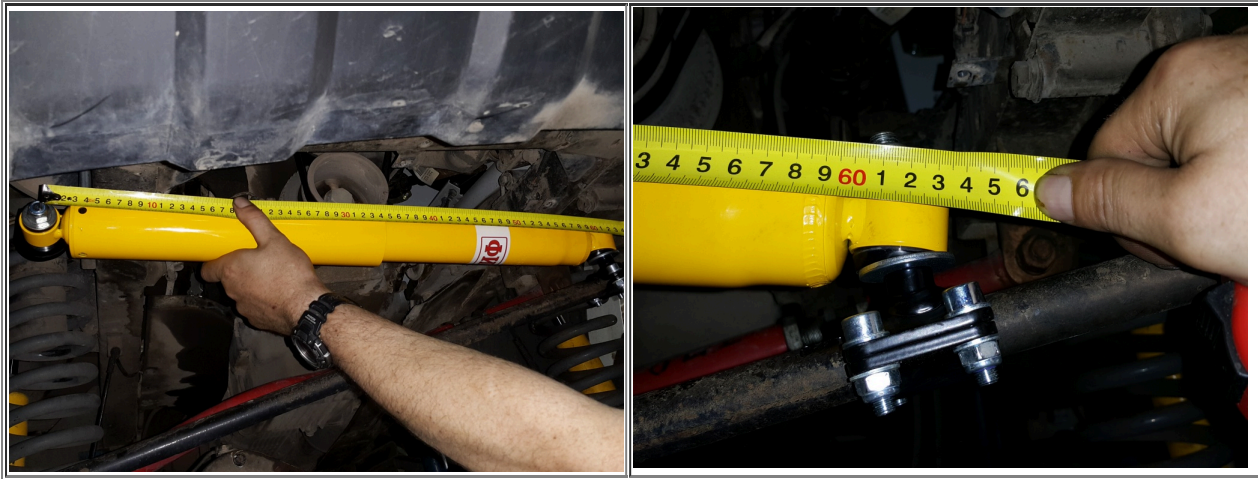

4. The damper should be located directly above the steering rod, along it. The damper cover must be located on the frame bracket.

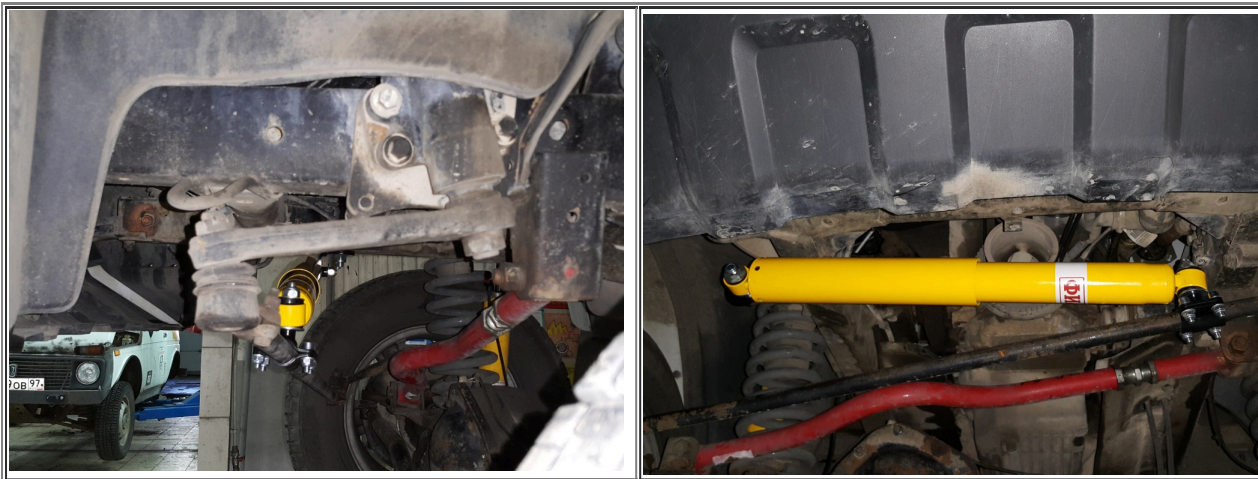



5. Install engine compartment protection. Tighten all bolted connections.